

L2 滚筒异响的解决方法

The solution to the drum sound



拔掉设备的电源，拆掉设备的检修门。

Unplug the device and remove the access door.




需要一把活动扳手和 18mm 的套筒扳手，拆下中间的两颗黑色的螺母，取下中间的弹簧。

An adjustable wrench and an 18mm socket wrench are required.
Remove the middle two black nuts and remove the middle spring.



用 2.5mm 的内六角拆下轴承盖。

Remove the bearing cover with 2.5mm inner hexagon.

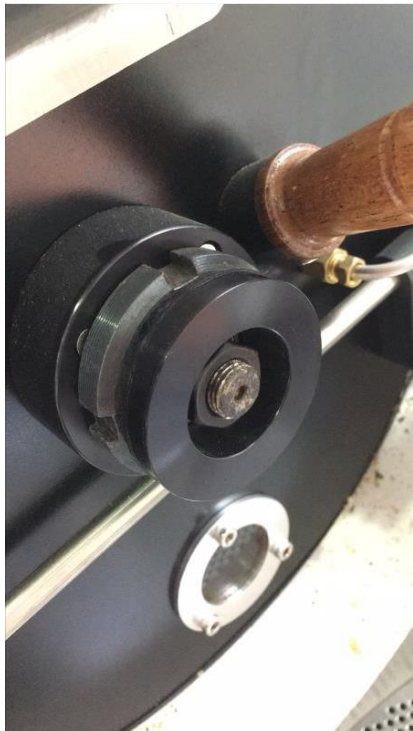

用 18mm 套筒拆下中间的两颗黑色的螺母

Remove the two black nuts in the middle with the 18mm sleeve.



用力敲敲松.

Knock it loose.



逆时针旋出轴承座，取出里面的轴承。换好新的配件，反步骤装回。

Turn out the housing counterclockwise and remove the bearing inside.

Replace the new parts and reverse the process.



调整锅炉的间隙。

Adjust boiler clearance.



1.5mm 的间隙 (以最小的内六角扳手为基准)

Adjust the clearance of boiler to 1.5mm (with the minimum hexagon wrench as the reference)