

# InAndon KOD Karaoke Player

## User Manual

Setup pass word is 347437 or 123456

# 1. Notice before operation

## 1.1 Simple introduction for product function

This product has below functions

1. KOD on-demand function: This product is a high-tech multimedia on-demand accompaniment player that can record videos of accompanying songs and sing repeatedly without the need for frequent replacement of accompanying discs. It is a professional karaoke entertainment device
2. USB playback function: This product is not only a high-tech multimedia jukebox, but also a product with USB playback function. DVD, VCD, CD and other formats can all be used to play high-quality audio and video effects on this product, with one device for both purposes.
3. Application: It is not only a jukebox, but also a home entertainment center, revolutionizing the integration and diversification of smart entertainment with the Android dual system.

## 1.2 Package list with the machine

Karaoke player \*1 Unit

HDMI Cable \*1

RCA Cable \*1

Power adapter \*1

## 1.3 Security notice

Read the user manual carefully: Before using, please read this operating manual carefully and follow its operating methods to use this product.

### 1.3.1

Power supply: Please use the power supply with the specifications specified in this operating manual to avoid irreparable damage to the product; And be careful not to use too many electrical equipment on a single socket, which may cause a fire. If you are unsure of the power supply specifications, please consult seller or local distributors.

### 1.3.2

Heat source: Regardless of whether this product is in working condition or not, it should be placed in a well ventilated place and away from other heating equipment or environments, such as heaters, electric heating equipment, gas stoves, etc., to prevent this product from not working properly and causing irreparable damage.

### 1.3.3

Moisture moisture: Regardless of whether this product is in working condition or not, please keep the environment dry and avoid using this product in excessively humid environments, such as damp basements, swimming pools, etc

### 1.3.4

Foreign object intrusion: Users can remove the screws at the bottom of the machine to replace the hard drive. There are no manually added or modified items for users to disassemble in other parts; So, under the guidance of our company, please do not disassemble the product casing at will to avoid foreign object intrusion, damage to product protection services, or contact danger.

### 1.3.5

Load bearing overload: Do not place other heavy objects on this product or allow it to be subjected to heavy blows and squeezing, in order to prevent it from working properly.

### 1.3.6

Lightning strike prevention: If this product is not used for a long time or if there is a risk of lightning strikes due to expected weather changes, it is recommended to remove the plug of this product to prevent damage caused by lightning strikes.


Repair: If this product does not work properly, please contact our company for technical guidance or provide repair services:

Note: The equipment should be connected to a power grid output socket with protective grounding and use a power plug and appliance coupler as a section connection device. The section connection device should be easy to operate.

### 1.3.7

Protecting the hard drive: During use, it is prohibited to move the karaoke machine. After completing use, first click on the screen shutdown soft shutdown, or the mobile app shutdown. 2. -3 minutes. Wait for the machine to store data before turning off the power. If the machine is not used for a long time, it is necessary to cut off the power supply or turn off the song machine switch to avoid the prolonged standby state of the machine affecting its service life.

## 1.4 Operation instruction for interface

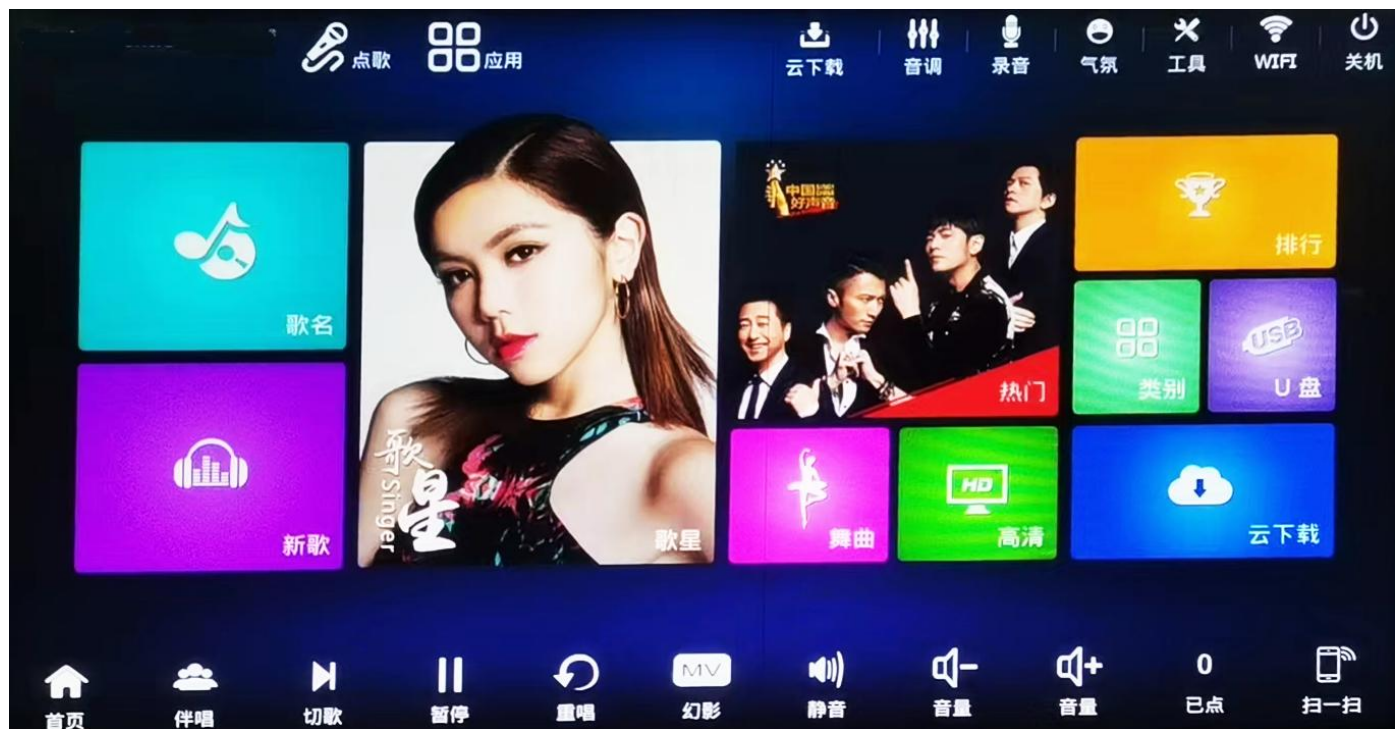

### 1.4.1 Songs ordering instruction

#### 1.4.1.1

Click on the song name, star, new song, dance song, hot snogs leaderboard, category, and HD to request a song. View the currently played song in the order' list and perform operations such as' topping 'and' deleting '

**Song request:** It is a quick way to request a song. After entering the song list, enter the Pinyin initial letter of the song name on the pinyin keyboard to find the song you want to request

For example, You want to search "万里长城永不到"。 Just input:"WLCC" There will be choice on songs list.

**Priority:** Set this song as priority and play the priority song after the current song is played.

**Favorite:** Enter your convenient account password to save this song. You can find your favorite songs on my favorite list.

**Preview:** Play the current song screen on a small screen to easily find out if the song version is what you want.

#### 1.4.1.2

##### Searching instruction

The search method is displayed on the song name display page, where you can input the relevant song name in Pinyin or handwriting to find the relevant song

**Song title:** according to the language, it can be divided into all, Mandarin, Southern Min, English, Japanese, Korean, Vietnamese language and more (Shupu Zhai, Malaysian Malay, Hindi, Thai, Indonesian language)

**Singer:** According to the gender of the region, they are divided into mainland male stars, mainland female stars, Hong Kong and Taiwan male stars, Hong Kong and Taiwan female stars, overseas male stars, overseas female stars, band groups, and all singers

**New songs:** according to the category of languages, they can be divided into national language, southern language, English, Japanese, Korean, Vietnamese, and more (Cambodian, Indian, Thai, Malaysian Malay, Indonesian language)

**Dance music:** According to different types of dance music, it can be divided into: Hot Dance Tanyaki, Disco, Tango, Chacha, Waltz, Prussia, Gitma, and Slow Shake Bar

**Ranking list:** according to the ranking categories, it can be divided into: new song ranking, Douyin music ranking , Netease Cloud music ranking, QQ music ranking, Mandarin ranking, Japanese ranking, English ranking, Cantonese ranking, Southern Min language ranking, and love song duet ranking

**Category:** According to different preferences, it can be divided into: film and television songs, women's emotions , nostalgia, love song duets, online songs, music appreciation, celebration songs, folk songs, praising the motherland, foreign language songs, hot dance barbecues, discos, grassland songs, drama appreciation, children's songs, and men's inns

**HD:** HD songs are divided into Mandarin, Cantonese, Southern Min, English, Japanese, Korean, Vietnamese language more (Shupu Zhai, Indian, Thai, Malaysian Malay, Indonesian language)

**Foreign languages:** English, Japanese, Korean, Vietnamese language, Thai, Russian, Cambodian, Malaysian Malay, Indonesia

**Cloud:** The song with a cloud icon on the right side of the song name represents that the song is not on the local hard drive. After clicking, it will be downloaded to the local hard drive and added to the clicked

2.App

Not only is it a jukebox, but it is also a home entertainment center. The jukebox Android dual system is intelligent and integrated, with diversified entertainment, online cinemas, cable TV, live event broadcasts, and a complete system configuration with huge storage capacity (Some apps are not available in some countries; the Android system cannot change the language to English)



3. Function

3.1 Cloud download

Users can download multiple songs in the cloud download list, and can download, delete, and prioritize song downloads on the cloud download interface. Songs are downloaded in a queue mode, and the second song in the current list will not be automatically downloaded until the first song is downloade



3.2 USB add songs

To facilitate users' viewing of private files, this audio king song machine supports adding songs to a USB drive. After inserting the USB drive, click on the "USB drive" on the homepage to enter this function; Play: Click on the name of the video and audio file displayed on the page to play the selected file; Add Song: After clicking on the USB flash drive to add a song, select the song you want to add and click Add Song to add it to the hard drive of the jukebox. Note: You need to place the song file in the newsong folder of the USB drive and click on "Add Song" on the USB drive to display the song. Supported formats: mkv, mpg, dat, vob, wmv, avi, mp3, wav





Add songs display

### 3.3 WIFI

Cloud downloads, mobile song requests, and applications all require the use of WIFI function. Click on the WIFI icon in the upper right corner of the interface to pop up a WIFI list. Search for surrounding signals, select the WIFI name you are currently using, enter the WIFI password, and click on the connection. After successful connection, the WIFI icon will light up, otherwise it will be gray.



### 3.4 mood

Can send specified emoticons, flower images, or atmosphere, applause, cheers, whistles, and applause to the song playback screen



### 3.5 Record and share

To use the recording function, you need to first connect a voice cable (built-in reverb or power amplifier integrated devices don't need to connect a voice cable)

Please scan the QR code to access the video tutorial for the connection method:



Users can save the songs they want to save to a USB drive through recording, making it easy to enjoy in the future

- a. Switch to the song that the user wants to record
- b. Click on the homepage to record
- c. After entering the recording interface, click on the "microphone" icon to start recording

After the recording is completed (you can also manually click Save to interrupt the recording), you can try listening, delete downloading (copy to USB flash drive), and share after the recording is completed

### 3.6 Password

You can modify the default login password of the jukebox and use one that you can easily remember

### 3.7 Favorite songs.

You can use this function to bookmark your favorite songs

Convenient for future on-demand broadcasting

Operation: Click the "Love" button below the song name in the playlist such as song title, singer, and leaderboard to bookmark. If you are not logged in, a window will pop up where you can enter your account password before bookmarking

View: Click on the "Tools/Setup" button and enter your convenient account password to enter the favorites list

### 3.8 Change background

Users can choose the background change method according to their preferences: "Tools" - "Background Change" - Select the preferred background (Some machine need to use USB disc to change background )

### 3.9 Version no.

Display information related to the jukebox

Brand name, software version, machine number, IP address, remaining disk space, local playlist count, cloud playlist count, SN number

### 3.10 Central control(Only used in KTV Hall )

The connection of the song machine to the central control box can achieve functions such as service, sound effects, lighting, etc

Services: Call Service, Cancel Service

Voice control: controls the microphone, volume, sound size, and tone lighting of the power amplifier: dynamic, soft, bright, secret automatic mode, full on, draft mode, full off

Sound effects: singer, magic sound, live, KTV

### 3.11 Menu Language

Yinwang song machine is considered for users of different nationalities

Built in: Simplified Chinese (default), Traditional Chinese, English, Japanese, Korean, and other languages.

Users can change the system language themselves

## 4.System maintenance and upgrade

### 4.1 System upgrades

can fix bugs in the current version, increase stability, and experience the latest features

Online upgrade: Access into Setup/Tool-Setup-Upgrade-Online upgrade.

Local upgrade: It is usually for solving system bug.

Copy the upgrade file to the root directory of the USB drive, connect the USB drive to the jukebox, enter the "Settings" menu of the jukebox, select the system upgrade, select the upgraded file, and click "OK" to wait for the upgrade to complete and automatically restart the jukebox .(The machine can work normally without the need for system upgrades )

## 4.2 System maintenance

Singer management: Add or modify singer names or images

Song management: modify song information, add songs, and set public songs

Song library scanning: After manually replacing the database file of cloud songs, you need to click here to scan once to display local songs normally

Scroll text: Display edited information at the top of the song playback screen, such as customer welcome words or business premises precautions

Other settings: with functions such as channel reporting and touch screen settings

Network settings: View network status, information, and mode, and enable the AP hotspot function of the jukebox

Background password setting: Modify the system password of the song machine, and the system default password is 347437 Or 123456

## 5. Network&Cloud Description

This music king song machine has a built-in WIFI network card and wired network LAN interface. Users can connect to the internet through the built-in WIFI network card and the available WIFI or wired LAN interface:

### 5.1 Connect WIFI Method

Click on the WIFI icon in the upper right corner of the interface, and a WIFI list will pop up to search for surrounding signals. Select the name of the WIFI you are currently using and enter the WIFI password to connect it (refer 3-3 for details)

### 5.2 Connect network cable

Connect the internet cable to the LAN interface of the jukebox and start the jukebox to take effect.

### 5.3 Cloud download

Songs that are not available on this device can be downloaded from the cloud. Search by song name and star to find the song you want to play on demand. If you find a song with a cloud icon on the right side of the song name, click on it and download it from the cloud to your local hard drive and add it to the already clicked song. The progress of downloaded songs can be viewed by clicking on Cloud Download. Users can click on multiple songs to the cloud download list. (For details, refer to 3-1)

## 6. Mobile device select songs

### 6.1 Wechat scan QR code

Firstly, ensure that the phone and karaoke player are connected to the same WiFi and that the WiFi signal is good. Scan the QR code of a karaoke machine's WeChat song request with a mobile phone WeChat scan, and open the music singing platform to start singing.



### 6.2 Mobile device app order songs (Mobile device and karaoke machine must connect the same wifi)

Scan QR code  
to get video instruction



Mobile App control

## Picture instruction



### 7.After service and warranty

24 Hours service contact number :

Mobile phone:86 18910770425

WechatL 8618910770425

Whatsapp 8618910770425

### Warranty

The after-sales guarantee service for the product is 1 year from the date of complete delivery.

We will automatically prolong 3 months warranty if we get your satisfaction and 5 stars feedback on online store.

If there are running problem with the product, please contact our sales personnel to communicate the specific situation. If there are problems with the machine due to easily replaceable parts such as hard drives, our company will mail the replacement parts and provide instructions for replacing the hard drives. If there is a problem with the touch screen of the machine or other problem that is not easy to fixed, our company will arrange a cooperative courier to pick up the goods, complete the repair and re-delivery services.