

/***** V5.3 *****/

1. Adapt to the SN_GCS_V63
2. Add Rudder amount when use manual mode and Acro mode
3. Add servo frequency settings
4. add servo range 500-2500us to use 180° servo
5. add more install direction
6. cancel the rssi calibrate function
7. Optimized the Acro mode