

OPERATION INSTRUCTION OPERATION INSTRUCTION















■STANDARD

•GB8898-2011 GB17625.1-2012 GB13837-2012

■ Displaying

LCD display

■Keyboard

· 88-key standard keyboard with touch response

■Voice

• 138 Kinds of GM standard voice , 64-note polyphony

■Style

•118 kinds of auto chord accompaniment

■Demo

· 30 kinds of different demo songs

■Effect Control

· Touch, Metronome, Date wheel

■ Recording

· Record, Audio track, Accompaniment track, Play

■Accompaniment Control

· Start /stop, Sync, Fill in, Intro/Ending

■Chord Control

· Single chord, Finger chord, Chord close

■Intelligent Teaching

•Demo song , Lesson 1, Lesson 2

■Pedal

· Soft pedal, Sustain pedal

■Other Control

· Power on/off, Master volume control, Accompaniment volume control, Chord volume control, Tempo

■External Function

*Power jack, Audio out、Headphone jack 、Pedal jack、MIDI in/out、MP3 function

■Power adaper

•Input: AC110-240V, 50/60Hz; output: DC15V, 3A

■Output Power

• <45W

■Carton Size

• L×W×H=1528×658×420 (mm)

■Gross Weight

• 59KGS

Caution

Be sure to obey the following basic notice in use so as not to harm yourself or others and damage this instrument or other external equipments. These notice includes (but is not limited to) the following.



- ◆Do not disassemble or modify this instrument in any way, otherwise it will cause the electric shock, scalding and personal injury risk. You should entrust the internal inspection, debugging and maintenance to your dealer or the place you bought it.
- ♦ If there is wear and tear or damage occurs in power cord or power plug, or a sudden power failure in use, and noticing the smell of abnormal smell or the electric grand piano smoking, you should turn off power, unplug the power plug immediately and find qualified repairman to carry out the overhauling.
- ◆ Before cleaning the electric grand piano, you should turn off power and upplug the power plug, do not do the charged operation with wet hands. Do not wipe and clean the electric grand piano with corrosive solvent.
- ◆Do not put the electric grand piano on vibrating, slantwise or unstable surface, otherwise the electric grand piano may overturn to hurt human body. You should always ensure that you use the screws provided to fix the electric grand piano on the bracket. The electric grand piano may overturn from the bracket and cause the risk of personal risk if the electric grand piano is unstable
- ◆Avoid the electric grand piano in the rain or use it in the washy and wet place. Do not put the following objects on the electric grand piano.
 - •Containers (vase, potted plant, cup, cosmetic bottle or medicine bottle) are full of water or other liquid;
 - •Small metal objects (including hairpin, sewing needle and coin);
- •The fire source of the naked fire, such as the lighted candle. Prevent the water, liquid, small metal objects and fire soure from spraying out into this instrument, then, it may cause the fire disaster or electric shock.



- ◆ Avoid placing the electric grand piano at the following places in order to avoid damaging the surface of the electric grand piano and internal components
 - The place of high temperature and more dust.
 - · Kitchen or other places with oil fume.
- The neighborhood of the air conditioner, The place where the direct sunlight shines or any other places that prompt the instrument to create the high temperature
- ◆ Do not place the electric grand piano in the neighborhood of other electric appliance,it may cause the mutual interference between the electric appliance (such as: television, radio, sound box etc), do not put the heavy objects on the electric grand piano,do not use excessive force to press the piano's keys and poke the control switch.
- ♦When you don't use the electric grand piano for a long time, you should upplug the power plug. You should hold the power plug and not pull the power cord when you upplug the power plug of this instrument.



- ◆Be sure to install brackets according to the instruction and ensure all the connection is very firm. moreover, you should choose the appropriate position to install the brackets
- •When you place the electric grand piano on the bracket, take care not to let your fingers be clamped between the piano and brackets.
- •When you move the electric grand piano, there should be two persons carry together at least. The brackets may overturn and cause the risk of personal injury if you try to move the electric grand piano by yourself
- •Besides, examine whether screws are untight regularly. You should tighten them if you have found the untight screws
- ◆ Keep the AC power cord away from the heating source such as radiator etc. Do not overbend the power cord. Do not put heavy objects on the power cord. Do not place the power cord where the people walk. Do not wrap other thing around the power cord in order to avoid damaging it.
- ◆ Do not play music loudly for a long time. The excessive volume will damage your hearing, so you should take special care to use headphone



No.	Code of song	No.	Code of song	No.	Code of song	
Children		12 PIZZICATO POLKA		23	The Entertainer	
01	IT'S A SMALL WORLD	13	Old MacDonald A Farm	24	BRIDGE	
02	THE COLT IS TAKING A WALK	fashion		Christmas		
03	LONG, LONG AGO	14	SIPPIN'CIDER THROUGH A STRAW	25	THE HIP HOP'S NIGHT	
04	OLD FOLKS AT HOME	15	JUNE SAMBA	26	FUNK	
05	KATIOLLIA	16	G AIR ON THE G-STRING	27	End Of Summer	
06	SYMPHONE NO.94 SUPRISE	17	DARK EYES	28	d6-It Don't Mean A Thing-1-a	
07	GWINE TO RUN ALL NIGHT	18	LOVE IS BLUE	29	COBWEB	
08	ANNIE LAURIE	19	Wine	30	BLUE LUNCH	
09	Turkey in The Straw	20	White Apple Flower			
10	The Stage Coach	21	Time's Dance			
11	The Old Gray Mare	22	TheRed Sarafan			

Trouble Shooting

Trouble	Reason and Solution
Accompanying a slight noise in turning on/off power.	Normal phenomenon.Please do not worry.
After turned on power, pressed the key, there was no sound.	Check whether main volume knob was set at proper position. Check whether audio output jack was connected with other equipment so that the built-in speaker system cutted off automatically.
In a same voice, note and note quality has slight difference.	This is normal phenomenon, caused by different voice sampling system of electric grand piano.
When you use sustain function, some voice has the long sustain, some voice has the short sustain.	This is normal phenomenon, it is because that the sustain setting of electric grand piano was the best length.
Overall volume is too low,or voice and accompaniment volume is imbalance.	Check whether main volume knob and accompaniment volume control were set at proper positions.
Even if sync start has been started and the keyboard has been played, there is no accompaniment.	Check whether auto bass was set at auto chord position, The accompaniment can start unless you play the keys that lies in auto bass keyboard area.
When you use the mobile phone, the electric grand piano has the noise	Mobile phone or other mobile equipment may cause the disturbance. To avoid this noise, you can close mobile equipment or use it in the place that is far away from the electric grand piano.
Step on pedal, there was no response	Check whether pedal interface is properly connected with the electric grand piano •







No.	Name of Style	No.	Name of Style	No.	Name of Style	No.	Name of Style
	Dance	032	Rock 1	064	Foxtrot 2	096	Viener Waltz
001	Dance1	033	Rock 2	065	Surf	097	March 4/4
002	Dance2	034	Rock 3	066	Big Band 1	098	March 6/8
003	HIP-HOP	035	Rock 4	067	Big Band 2	099	Polka 1
004	Disco1	036	HEAVY METAL	068	Cool Jazz	100	Polka 2
005	Disco2	037	8 Beat 1	069	Swing Waltz	101	Arabian 1
006	Disco3	038	8 Beat 2	070	Dixieland	102	Arabian 2
007	House 1	039	8 Beat 3	Latin		103	DANGDUT
008	House 2	040	8 Beat 4	071	Samba 1	104	KRONCONG
009	House 3	041	8 Beat 5	072	Samba 2	105	KRONCONG POP
010	House 4	Rhyth	m & Blues	073	Disco Samba	106	XINJIANG1
011	Techno 1	042	R & B1	074	Cha-Cha	107	XINJIANG2
012	Techno 2	043	R & B2	075	Disco Cha	108	YUNNAN1
	Rock	044	Blues 1	076	Guaracha	109	YUNNAN2
013	8 Beat Pop	045	Blues 2	077	Mambo	110	ANHUI
014	POP SAMBA	046	Gosple	078	Bossa Nova	111	HENAN
015	FOLK POP	047	Slow Rock	079	LATIN	112	SHANBEI
016	Pop Rap	Rock 2		080	Beguine	113	KOREAN
017	Pop Bossa	048	Rock & Roll 1	081	Salsa	114	HEBEI
018	Pop Reggae	049	Rock & Roll 2	082	Caribbean	115	QINGHAI
019	POP WALTZ	050	Rock Shuffle	083	Rhumba	116	JIANGNAN
020	16 Beat Pop	051	Boogie Woogie 1	084	Tango	117	MONGOLIAN
021	Ballad 1	052	Boogie Woogie 2	085	Reggae1	118	XIZANG
022	Ballad 2	053	Charleston	086	Reggae2		
023	New Age	054	Twist	Count	гу		
	Funk & Soul	Jazz		087	Country Rock 2		
024	Funk 1	055	Swing 1	088	Country Ballad		
025	Funk 2	056	Swing 2	089	Country Shuffle		
026	Funk 3	057	Jazz Waltz	090	Country Waltz 1		
027	16 Beat 1	058	Jazz Ballad	091	Country Waltz 2		
028	16 Beat 2	059	Slow Jazz	092	Two Step		
029	16 Beat 3	060	Fusion	093	Bluegrass		
030	Soul	061	Shuffle 1	Trditio	onal		
031	Soul Ballad	062	Shuffle 2	094	Waltz		
	Rock 1	063	Foxtrot 1	095	Musette		

Thank you for choosing our electric grand piano. It combines the advanced function and exquisite voice in one. It will help you learn to grasp the traditional musical instruments and bring the happiness of enjoying the technology. Before using this instrument, please read this operation instruction carefully so that you can exert its function better. Be sure to preserve all user files properly for future reference.

Table of Contents

IPanel Control	
1.Panel	
2.LCD Displaying Screen	1
II.Preparation before Use	· - 2
1.Power Connection	
2.The Lid of the Piano's Keyboard	2
3. Music Stand	
III.External Function	
1.Use of Headphone	
2.Use of Audio Input/Output	3
3.Use of MIDI	
IV. Quick Guide	
Turn on Power Switch	·4
Volume Adjustment	- - 4
Voice	4
①Voice Selection	4
Control and Effect	4
①Touch Response	4
@Metronome	- · 5
③Data wheel	
Style	5
①Style selection	5
Variation	
①Intro/Ending	
②Sync	
③Fill-in	
<pre>@Start/stop</pre>	
⑤ Tempo	
Accompaniment Volume	- 6
©Chord function	6
1. Single Finger Accompaniment	6
2. Multiple Finger Accompaniment	- · 7
3. Chord close	7
4. Table of chord	7-8
5. Recording Operation	- 9
①Recording of Audio Track	- 9
©Recording of Accompaniment Track	- 9
Stop Recording	. 9
	9

Table of Contents

7. Intelligent Teaching	10
①Teaching	10
Mp3 Function	10
Use of pedal	10
①soft (left) pedal	10
②sustain (right) pedal	
Installation of piano body	·11
①Assemble Parts	11
②Assemble Drawing	12
V. Table of Voice	
VI. Table of Style	14
VII. Table of Demo	
VIII. Trouble Shooting	15
IX. Technical Specification	16






NI-	Name of Malan
No.	Name of Voice
	PIANO
001	GRAND PIANO
002	BRIGHT PIANO
003	E.GRAND PIANO
004	HONKY-TONK
005	E.PIANO1
006	E.PIANO2
007	HARPSICHORD
800	CLAVI
	MALLET
009	CELESTA
010	GLOCKENSPIEL
011	MUSIC BOX
012	VIBRAPHONE
013	MARIMBA
014	XYLOPHONE
015	TUBULAR BELLS
016	DULCIMER
	ORGAN
017	DRAWBAR ORGAN
018	PERCUSSIVE ORGAN
019	ROCK ORGAN
020	CHORCH ORGAN
021	REED ORGAN
022	ACCODION
023	HARMONICA
024	TANGO ACCODION
	GUITAR
025	NYLON GUITAR
026	STEEL GUITAR
027	JAZZ GUITAR
028	CLEAN GUITAR
029	MUTED GUITAR
030	OVERDRIVER GUITAR
031	DISTORTION GUITAR
032	GUITAR HARMONICS
000	BASS
033	ACOUSTIC BASS FINGER BASS
034 035	PICK BASS
036	FRETLESS BASS
030	SLAP BASS 1
038	SLAP BASS 2
039	SYNTH BASS 1
040	SYNTH BASS 2
010	STRINGS
041	VIOLIN
042	VIOLA
043	CELLO
044	CONTRABASS
045	TREMOLO STRINGS
046	PIZZICATO STRINGS


No.	Name of Voice		
047	ORCHESTRAL HARP		
047	TIMPANI		
040			
049	STRING ENSEMBL STRING ENSEMBL 1		
050	STRING ENSEMBL 2		
050	SYNTH STRINGS 1		
051	SYNTH STRINGS 1		
053	CHOIR AAHS		
054	VIOCE OOHS		
055	SYNTH VIOCE		
056	ORCHESTRA HIT		
0.57	BRASS		
057	TRUMPT		
058	TROMBONE		
059	TUBA		
060	MUTED TRUMPT		
061	FRANCH HORN		
062	BRASS SECTION		
063	SYNTHBRASS 1		
064	SYNTHBRASS 2		
	REED		
065	SOPRANO SAX		
066	ALTO SAX		
067	TENOR SAX		
068	BARITONE SAX		
069	OBOE		
070	ENGLISH HORN		
071	BASSOON		
072	CLARINET		
	PIPE		
073	PICCOLO		
074	FLUTE		
075	RECORDER		
076	PAN FLUTE		
077	BLOWN BOTTLE		
078	SHAKUHACHI		
079	WHISTLE		
080	OCARINA		
	LEAD		
081	SQUARE		
082	SAWTOOTH		
083	CALLIOPE		
084	CHIFF		
085	CHARANG		
086	VIOCE		
087	FIFTHS		
088	BASS & LEAD		
	PAD		
089	NEW AGE		
090	WARM		
091	POLYSYNTH		
092	CHOIR		

No.	Name of Voice
093	BOWED
094	METALLIC
095	LOHAO
096	SWEEP
	EFFECTS
097	RAIN
098	SOUNDTRACK
099	CRYSTAL
100	ATMOSPHERE
101	BRIGHTNESS
102	GOBLINS
103	ECHOES
104	SCI-FI
	ETHNIC
105	SITAR
106	BANJO
107	SHAMISEN
108	КОТО
109	KALIMBA
110	BAG PIPE
111	FIDDLE
112	SHANAI
112	PERCUSSIVE
113	TINKLE
114	AGOGO
115	STELL DRUMS
116	WOOD BLOCK
117	TAIKO DRUM
118	MELODIC TOM
119	SYNTH DRUM
120	REVERSE CYMBAL
	SOUND EFFECTS
121	GUITAR FRET NOISE
122	BREATH NOISE
123	SEASHORE
124	BIRD TWEET
125	TELEPHONE RING
126	HELICOPTER
127	APPLAUSE
128	GUNSHOT
120	CHINESE INSTRUMENT
129	PIPA
130	YUEQIN
131	MIDRUAN
132	GUZHEN
133	ERHU
134	GAOQIN
135	BANGDI
136	XIAO
.00	DRUM SET
137	STANDARDDRUMSET
138	CHINA DRUM SET
.00	5V.B.(6)




2. Assemble Drawing

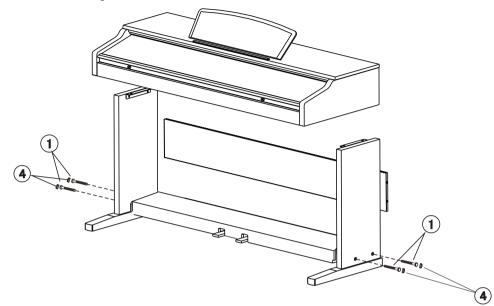

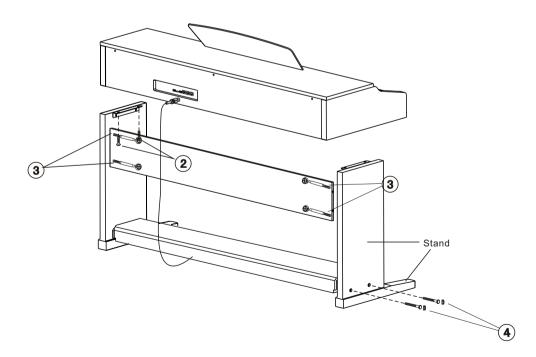




PANEL

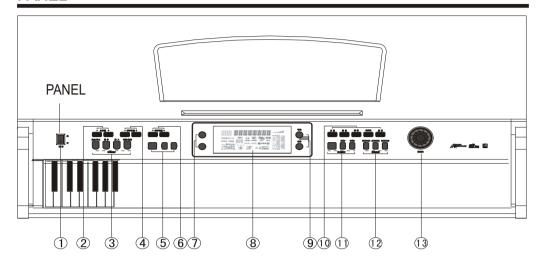

- 1. Power ON/OFF
- 2. Master Volume
- 3. START/STOP, Sync, Fill-IN Intro/Ending
- 4. Accompaniment Volume
- 5. MP3 Function
- 6. Chord Volume
- 7. Tempo+/-

- 8. LCD display
- 9. Style, Voice
- 10. Touch, Record, Audio Track, Accompaniment track, Play
- 11. Metronome, Lesson1, Lesson2
- 12. Single, Finger, Chord Close
- 13. Data wheel

LCD displays various kinds of work state information of the electric grand piano

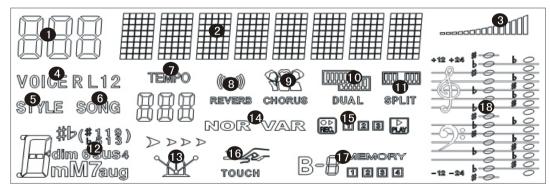

- 1.Digital Displaying Area
- 2. Characters Displaying Area
- 3.Volume
- 4. Voice Selection
- 5.Style Selection


- 6.Demo
- 7.Tempo 8.Reverb
- 9.Chorus
- 10.Chord Displaying Area
- 11. Metronome
- 12.Fill in
- 13.REC/Play
- 14.Touch
- 15. Staff Displaying Area

1



Power Connection

Using special AC-DC power adaptor was equipped with this digital piano or Power adaptor with 15V output voltage,3A output current and positive pole plug centerInserting DC plug of adaptor into DC15V power port at back of digital piano,Inserting another end of adaptor into Mains power socket when you use this piano,finally Turning on power switch to start perform

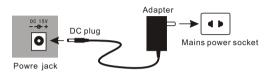

⚠ Warning

Make sure the power voltage coincides with the voltage on the label which lies in the back interface board of the piano. Too high or low voltage will damage the electric grand piano.

The Lid of Piano's Keyboard ■Open the lid of piano's keyboard

Lift the lid of piano's keyboard gently and push it inside, it will slide inside as well, the lid will be opened.

■Close the lid of piano's keyboard

Slide the lid of piano's keyboard towards the direction of your body and put down the lid over the keyboard.

Music Stand

■Lift music stand up

Pull the music stand up untill it was upright.now the spring bounces outside. put the spring brakcet on the top wooden bracket of the piano, the music stand will stand on the top wooden bracket of the piano in a slant way.

■Put down the music stand

1.Pull the music stand up untill it was upright. 2.Fold the spring inwards, Notice: you need to lay EPE slice as to avoid the scraping.

3.Put down the music stand backwards gently untill it layed on the top wooden bracket of the piano.

↑ Caution

When you open or close the lid of piano's keyboard, You should hold it. You can release it unless it was opened or closed completely. Take care not to let your fingers (other person's fingers, it is special for the children's fingers) be clamped between keyboard and lid.

A Caution

Do not put metal objects or papers on the lid of piano's keyboard, otherwise the small object on the lid may fall into the electric grand piano when the lid was opened ,it will be difficult to take it out, it may cause electric shock, short circuit, fire disaster or other serious damage to piano.

Caution

Do not use the piano when the music stand was lifted to the half height. When you put down the music stand, You should not loosen your hand before the music stand layed on the top wooden bracket of the piano.





■Installation of Piano Body

- 1. Using 4pcs four in one screw to fix the board with pedal and back board.
- 2. Using 4pcs M6x50 screw to fix the right/left stand and its support with pedal respectively.
- 3. Using 4pcs M6X20 screw to fix the body of piano on the bracket.
- 4. Connecting the cable of pedal and the pedal jack in the back of piano body as per instruction image.
- 5. Put 4pcs nuts onto the 4pcs screws respectively as per image.

1. Parts





Intelligent Teaching

This electronic grand piano has one demo and 30pcs of song to show its elegant sound quality and melody.

1. Teaching

1.LESSON1,Press[LESSON1] to enter TEACHING mode,Then chose any one of song by rotating the data wheel,press[START/STOP] button to stop playing.the melody will be the main melody if consumer press the keys casually,the background sound will play this subsection repeatedly it won't stop until the song is over,press [STOP/STOP] to exit the function.

2.LESSON2, Press [LESSON2] to enter TEACHING mode, then chose any one of song by rotating data wheel, Then press start/stop button to play, the melody will be the main melody if customer press The keys casually and it won't stop until the song is over, press [START/STOP] to exit the function.

MP3 function

MP3 Jack:Support USB to proceed with play ,MP3 song can play by this port.Pressing [Play/Pause]button can switch present song state, One song will back off if [Previous song/volume-] button was pressed down,One song will go ahead if [Next song/Volume+]button was pressed down,To press [Previous song/volume-] button for long time to reduce Volume, To press[Next song/Volume+]button to raise volume



Use of Pedal


The electronic grand piano has two pedals, they have the same function as that of traditional piano which can enrich music expression.

1.Soft (Left) Pedal

When you step down soft pedal, the played volume will be weaken, the sound quality has the slight change. When you step down soft pedal after played a note, the volume and sound quality will not change.



Controllable sustain pedal has the same function as that of the traditional piano. The performance has the prolonged effect when you stepped down the pedal. The prolonged sound will stop immediately when you release the pedal.

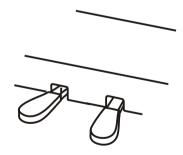




3

External Function

Use of Headphone

When you exercise performance at night or do not want to disturb others, you can use headphone jack which lies in the bottom bracket that is under the keyboard. After you inserted the headphone in PHONES jack, the speaker system inside the electric grand piano will cut off automatically.



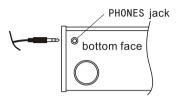


Use of Audio Output

This electric grand piano has built-in speaker system, It can be connected with other amplifier or speaker system for use by audio LINE OUT. Insert one end of audio LINE OUT in LINE IN or AUX IN port of other hi-fi equipment, insert another end of in audio LINE OUT port in the back of the electric grand piano body.




To avoid damaging speakers, external equipment should be turned off before connecting. Please adjust the volume that you have setted up to the minimum level at the same time.you can enhance the volume untill you are satisfied with it when you are playing the piano.

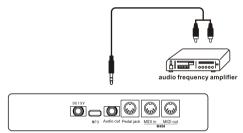

Use of MIDI

1.MIDI input: connect MIDI input jack with MIDI output jack of another electronic equipment which is compatible with MIDI through the MIDI connection line, the electric grand piano can receive the data of external MIDI equipment though the MIDI input.

2.MIDI output: connet the MIDI output jack with MIDI input jack of another electronic equipment which is compatible with MIDI though the MIDI connection line. When a note was played, the corresponding MIDI signal will be transfered out, moreover, it can control other MIDI equipment through the changed information of the transfer program (Note: MIDI ouput can transfer keyboard data only)

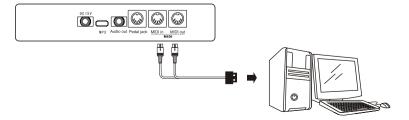



Turn on Power Switch

Press [POWER] button to turn on the piano.



Volume Adjustment

You can set up the high or low volume by pressing the+ or - volume button . the default volume is 27.



Caution

- Before turn on the power, please adjust the volume to the minimum level by the volume rotary button.
- Before you turn off power, please rotate volume knob to the lowest sound. Then, turn off the power.

Voice

The electric grand piano can provide 138 kinds of sounds, including 128 kinds of GM voice, 8 kinds of Chinese folk music and 2 groups of keyboard percussion .pls refer to the voice list in the appendix .

■Voice Selection

- 1.Press [VOICE] button to enter voice selection status
- 2. You can select the voice that you want by pressing data wheel





Instruction

- •The default 001 GrandPno displays in the LCD in the startup state.
- •while selecting voice, LCD will display the name of selected voice.

■Touch Response

By this function, you can control the touch of fingers performing the keys to allow dynamic variation of volume.

Press [TOUCH] button to switch touch function of the keyboard, there are three touch types for choice altogether.

- 1.Press [TOUCH] button to open touch response and LCD displays the symbol 🜌
- 2.Press [TOUCH] button,do the loop operation in this four status: 001/002/003/OFF.

Instruction


When the electric grand piano is open, the touch keyboard will be setted automatically and choose the touch type 2 automatically.





Recording Operation

You can record your performance in the electronic grand piano, and it also can be realized a band performance effect via using recording function .

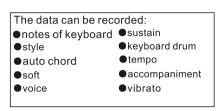

Instruction

•If you record data in a track including previous data, the previous data will be covered and lost. To cancel the track that has been choosenfor recording, press the corresponding track button once again.

1. Recording of Audio Track

When you press[RECORD] button LCD display the symbol and enter the status of recording waiting. Then press [AUDIO TRACK] LCD display No. 1 symbol indicating this track enters the recording preparation. The beat point display as per current tempo while the indicator light shines. Press any key of keyboard to begin to record.



2. Recording of Accompaniment Track

When you press[RECORD] button LCD display the symbol and enter the status of recording waiting. Then press [ACCOMP TRACK] LCD display No.1 symbol indicating this track enters the recording preparation. The beat point display as per current tempo while the indicator light shines. Press any key of keyboard to begin to record.



3. Stop Recording

You can stop recording by pressing [RECORD utton to go into standby status of play If you press[INTRO/ENDING] button during recording accompaniment track, a corresponding coda mode will play, and then recording will stop.



Instruction

If the content of memory is used up, recording will be automatically ended

4. PLAY

Press [PLAY] button to play the recording







Original name	Ab.	Normal pronunciation
MAJOR SIXTH ADD NINTH	69	1-2-3 -(5)-6
AUGMENTED	aug	1-3- [#] 5
MINOR	m	1 ^b 3-5
MINOR SIXTH	m6	1 ^b 3-5-6
MINOR SEVENTH	m7	1- ^b 3-(5)-7
MINOR SEVENTH FLATTED FIFTH	m7 ^b 5	1-3-5-7
MINOR ADD NINTH	madd9	1-2-3-5
MINOR ADD NINTH	m9	1-2-3-5
MINOR MAJOR ELEVENTH	m11	1-3-(5)-7
MINOR MAJOR SEVENTH	mM7	1- ^b 3-(5)-7
MINOR MAJOR NINTH	mM9	1-2-3-(5)-7
DIMINISHED	dim	1-3-5
DIMINISHED SEVENTH	dim7	1-3-5-6
SEVENTH	7	1-3(5)-7
SEVVENTH SUSLEND FOURTH	7sus4	1-4-5-7
SEVENTH NINTH	79	1-2-3-(5)-7
SEVENTH SHARP ELEVENTH	7 [#] 11	1-(2)3- [#] 4-(5)-b7
SEVENTH THIRTEENTH	713	1-3-(5)-7&2-3-5-6-7
SEVENTH FLATTED NINTH	7 ^b 9	1-2-3-(5)-7
SEVENTH FLATTED THIRTEENTH	7 ^b 13	1-3-5-6-7
SEVENTH SHARP NINTH	7 [#] 9	(1)- [#] 2-3-(5)-7
MAJOR SEVENTH AUGMENTED	M7aug	1-3#-5-7
SEVENTH AUGMENTED	7aug	(1)-3- [#] 5-7
SUSPENED FOURTH	sus4	1-4-5
ONE PLUS TWO PLUS FIVE	1+2+5	1-2-5

- •All above notes in the parentheses may be omitted.
- •A Perfect(1+5)produces accompaniment based only on the root and fifth which can be used with many major and minor chords.
- •If two notes are octachord apart from each other, accompaniment can only produce root.
- •If you play any three neighboring keys (black and white keys) simultaneously. Chord accompaniment will be eliminated immediately and only rhythm accompaniment remained.
- •The chord finger in the figure can only be confirmed mainly at root and will be recognized as m7(Minor seventh)at other places.
- •(Major sixth add ninth(69) can only be confirmed mainly at root.
- •(Minor sixth(m6) can only be confirmed mainly at root and will be recognized as m7b5 (Seventh fiatted fifth(7b5)at other places.
- •(One plus two plus five(1+2+5) can only be confirmed mainly at root and will be recognized as sus4(Suspended fourth(sus4)at other places.
- •When you play aug(Augmented(aug)dim7(Diminished seventh(dim7) the lowest note will be confirmed as root.
- •When you play aug(Augmented(aug) dim7(Diminished seventh(dim7).the lowest note will be confirmed as root.
- •In7#11(Seventh sharp eleventh(7#11) the lowest note played will be regarded as root or b7.



5

■Metronome

1.Press [METRONOME] button to start the beat sound of metronome.



■ Data Wheel

Data Wheel can easily select the sounds or styles you desire. When rotate the data Wheel, LCD will has its corresponding display .

■ Style

This electric grand piano provides dynamic style and accompaniment mode that suitable for various kinds of popular voice, there are 118kinds of style altogether (Please refer To the table of style in the appendix)

Style selection

- 1.Press [STYLE] button to enter the status of style selection.
- 2. Select the style you require by rotating the data wheel

Instruction

- •If the metronome emits sound, you can follow the beat sound to play.
- •Beat Tempo can be changed by pressing [TEMPO+] and [TEMPO-] buttons.



DATA WHEEL



Instruction

•When you select a style, LCD will display the name of style that was selected.

■Intro/Ending

Press [INTRO/ENDING] button and then [START/STOP] button, all kinds of style will lead style to enter into the normal status in the form of suitable intro. Used together with auto accompaniment, many preludes paraghraphs aslo have the special chord change and decoration. It can enrich your performance. Press [INTRO/ENDING] button once again, all kinds of accompaniment will lead the style to close in the form of a paraghaph ending.




■Sync

The function of SYNC can initiate style and accompaniment simultaneously with playing keyboard. Press[SYNC] button, then start any note of keyboard to initiate the function.

Use of SYNC start with an intro. If you want to add an intro before SYNC start, press[INTRO/ENDING] button before pressing[SYNC] button

Instruction

When auto accompaniment is opened, press eys in the auto accompaniment area of keyboard.

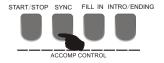



« Quick Guide



■ Fill-in

Each accompaniment has its own variation to enhance performance effect. During the process of the style playback, press (FILL-IN) button to insert a interlude in playing style, then, return to original main section style to continue playing



■ Start/Stop

After finishing selection of style, press

[START/STOP] button to play style, press

[START/STOP] again to exit the style function



■ Tempo

Press[-TEMPO+], to adjust the tempo with the adjustable range of 30-280. Press "-""+"button simultaneously to restore the default setting.



■Accompaniment Volume

Press [-ACCOMP VOLUME+] to adjust the style volume with adjustable range of 0-31.




■ Chord Function

1. Single Finger Accompaniment:

In this mode, you can decide accompaniment chord with one or two fingers, including large/small chord and large/small 7 chord, to produce the accompaniment effect of a whole band. The fingering is as follows (take C chord for instance):

- C large chord, play root sound.
- Cm small chord, play root sound and a black key on its left side at the same time.
- C7 7 chord, play root sound and a white key on its left side at the same time.
- Cm small7 chord, play root round and a black and white key on its left side at the same time.

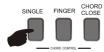








2. Multiple Finger Accompaniment:


In this mode, the notes you play at left hand area of keyboard (split point is No.25 key in auto accompaniment) decide the chord that has the accompaniment style, and the following kinds of chord can be identified (Taking C for instance, the note inside parentheses may be omitted)



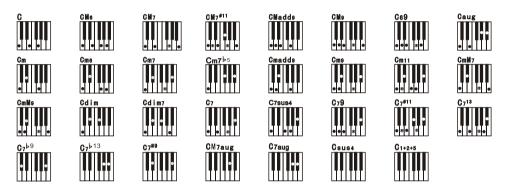

3. Chord Close

After starting chord , press [CHORD CLOSE] to exit chord accompaniment, style continues play

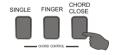

4. Table of Chord

Original name	Ab.	Normal pronunciation
MAJOR	М	1-3-5
MAJOR SIXTH	M6	1-3-5-6
MAJOR SEVENTH	M7	1-3-(5)-7
MAJOR SEVENTH SHARP ELEVENTH	M7 [#] 11	1-(2)3 4-(5)#-7
MAJOR ADD NINTH	Madd9	1-2-3-5
MAJOR NINTH	M9	1-2-3-(5)-7