



INSTALLATION INSTRUCTION


The installation and maintenance of this product must be by a professional. Please read this instruction sheet carefully before installation.




Do not operate with power supply connected.

CE Voltage: AC~220V~240V
Frequency: 50Hz


1.

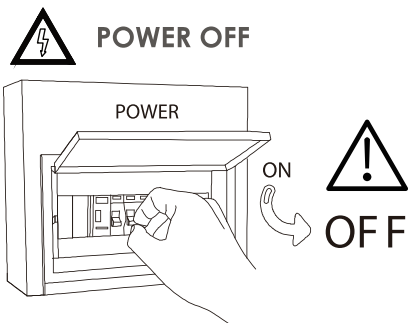


2.

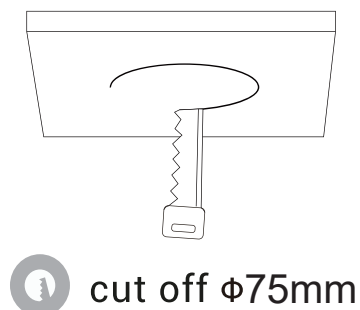


3.

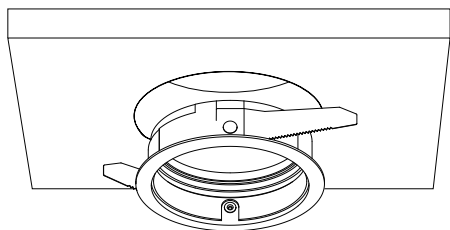


4.

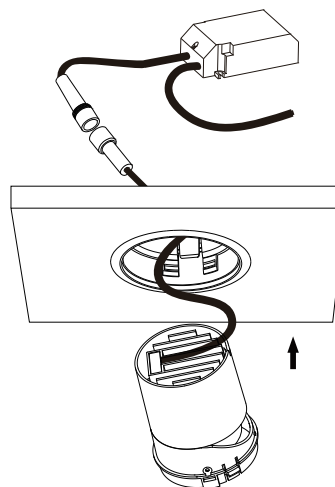

5.

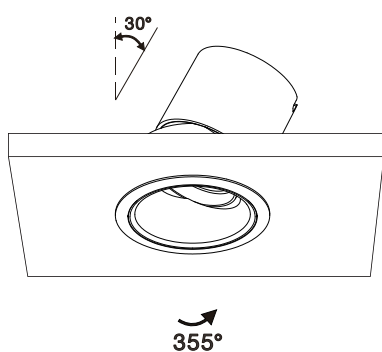

6.

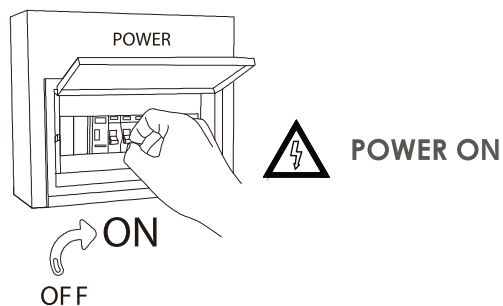

- 1 Disconnect the voltage from the system before performing the installation.
- 2 Cut ceiling hole in proper size in the ceiling as per required cut-out size and shape.
- 3 Connect power supply to power lead and pass the power supply through the ceiling opening.
- 4 Installation complete.
- 5 Restore voltage to the system.

