☐Dante T-DANTE



NF04661-1.0



则。 一般的一个的。 一般的一个小小小小小小小小小小小小小小小小小小小小小小小小小小小小小小小小小小小		
便携式推车 使用警告	携车和支架 只使用制造支 小心使车用或、 用力过猛和 可能造成机器 翻倒.	寄推荐 架. 央速停止 也面不平 器和推车

置于雨水或潮湿环境。切勿在积水旁使 用此机器.不要将机器安装于高温源附 近不要阻塞任何诵风口,以免引起火灾。 机器远离明火。 重要安全说明 -阅读安全说明 -遵从安全说明 - 遵守安全说明 -注意所有警示内容 -只使用厂商指定配件

电源线和插头 不要踩踏电源线或插头。 不要断开保护接地连接。 若提供的插头与您的AC座不配套,请联 系技术人员更换申源插座。 电源线与插头不要被重物压到以免有电 击或火灾危险。

清洁 当机器需要清洁时,可用吹风机或干净 的布除去灰尘。 不要使用清洁液,如不纯苯、酒精等. 为了安全, 请保持机器干净。

机器的维修 所有维修事项请询求专业技术人员帮助, 非专业人员请不要擅自处理,以免造成

2

1.	4
2.	5
з.	14

Δ

1.

- Mini-PCI
- .
- .
- 32 Bit
- 32*32 48KHz
- 32*32
- •
- 2000
- RGMII/MII
- •
- 2.
- 0 70 .
- -40 +100 •
- 3.
- ٠ 3.3V
- ٠ < 2W
- 4.

DANTE ACT/LINK 32





Settings Licensing Abou	,t		
A. 18	1000	0	DVS: ASIO Options
AUGIO		Options	Buffer Size: 512 - samples
Audio Channels:	32 × 32 *		
Dante Latency:	6 ms 👻		Encoding: 32 • bits / sam
,			Asio Latency: 10 - ms
Network Interface	: 區域環線	Ÿ	
Network Status	: 1Gbos		OK



Asio

S top Dante

Dante

• Dante

Dunic			
(1)	Dan	Dante	:
C \Progra	m Files Audinate Dante c	ontroller\in 64-bit Windows	С
C:\Progra	ım Files(x86)		

Dante

>Audinate>Dante Virtual Sound card> >

Dante Virtual Sound card Windows8 Windows key>Dante

т

Dante

: 🔬 dvs_gui.exe

Dante













1).





4).

5).





5.

Dante

CPU	1Ghz			
1GB				
wifi		32*32@	48kHz	
Windows 7 S UTF-8 DNS	SP1 Unicod	8 le	8.1	Unicode
7200Rpm		16		

Windows OS X

6.

• Dante

1) Dante

Dante Audinate

2) Dante

1. Dante

DanteController-3.5.6.2_windows.exe



Dante



Dante



File Device View Help Se III & A. III - Rother Device Data Chesh Network States Toward	Master Clock: Univers	
	Master Clock: Unknown	0
Sorting Device Info Clock States Network States Research		
@Dante: 8		
The Louising B		
1		
Film Proteines		
5		
P		
E Barris Barrison		
- point +		

Tx Rx [+] Tx Rx

Tx Rx

Dante Controller - Netwo	1000		X
File Device View Help			
9 首直部目	M-	star Clock: BSL/2N-II-484536	0
Protest Device Info Clock State	Network Status Events		
Dante"	diter inter manufic	*************	
File Insist	Tenne -		
Dante Receivers			
Andre L Andre R Degini L Degini R	0 0		
	12300	0	
	0 0 0		
0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0	0 0		
7: II		Multicert Restariet-Ober Statilor: Cor	Bater Monitor: III

Dante Controller Dante

Dante

"I Agree" Close"	
Dante Controller Setup Dante Controller	x
END USER LICENSE AGREEMENT NOTICE: CAREFULIX FRAD THE FOLLOWING LEGAL AGREEMENT WHICH CONTAINS RIGHTS AND RESTRICTIONS ASSOCIATED WITH YOUR USE OF THE AUDINATE'S SOFTWARE (THE 'SOFTWARE') AND DOCUMENTATION PROVIDED TO YOU BY AUDINATE PTY, LTD (THE 'LICENSOF'). INSTALLING OR USING THE SOFTWARE CONSTITUTE'S YOUR ACCEPTANCE OF SOFTWARE OFTWARE ONSTITUTE'S YOUR ACCEPTANCE OF	4 III +

🗸 I agree to the license terms and conditions

S Install Close

3. / Windows

2.

4. " " Dante " " .



• Dante

(T) Dante		
Dante	Mac	Dante
Dante		
Dante	Windows	Mac OS X



8



9

_ - X

Launch Close

Routing

Rx